


Contents

1. Curly cord
2. Clamshell hardcase
3. Noise cancelling headphones
4. 1/4" adapter
5. Boeing audio adapter

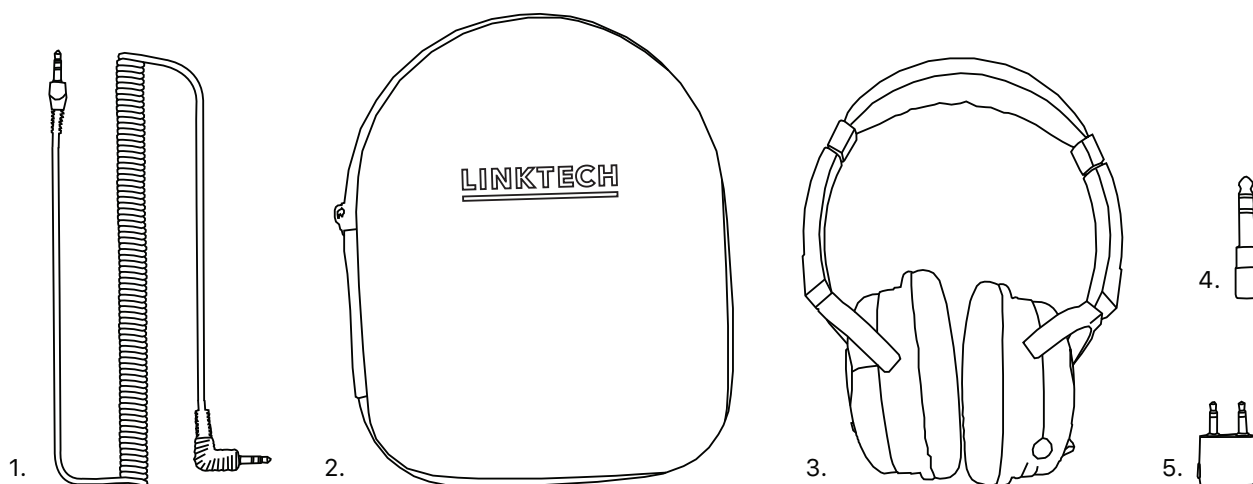

Using noise cancellation

Noise cancelling requires 1 AAA battery to operate. Press the the button on the left hand side of the headphones and slide the latch down to expose the battery compartment.

Enable noise cancelling using the switch on the right hand side of the headphones. The green LED indicates noise cancelling is active.

Troubleshooting

The detachable curly cord will pull out of the socket if the cable is tugged or caught on an object to prevent damage to your headphones or your detector setup.

If your curly cord is not properly connected you may lose audio in one side of your headphones, check that both connections at each end are correctly inserted.

Note: No sound will come from the headphones if the noise cancelling switch to the on position without a charged battery in the headphones.